

# 902 Enrollment Reader

*For enrolling fingers into an IBC system*



Use the 902 enrollment reader to enroll fingers into any system that uses IBC 901 fingerprint readers. The 902 reader is available with a usb or RS232 interface.

#### Features & Options

- Usb or Rs232
- Multiple Template transmission modes
- Flash Upgradeable
- Tabletop use
- Small Footprint

#### Interfaces

- Usb
- Rs232

**ibc**<sup>®</sup>  
International Bar Code

## Specifications

Interfaces:	Rs232, USB
Power Consumption:	12VDC 200mA typical
Material:	Gray ABS
Dimensions:	3.75" H x 2.25" W x 1.5" D
Mounting	Tabletop
Indicators	Good Read Beep
Temperature	-40°C to +85°C
Sensor:	Capacitive

## How to Order

Order 902 with a code to indicate options required.

902 -

INTERFACE

### INTERFACE

Blank – Rs232

U – Usb